

INDEX

ABS CONNECTOR LOCATIONS	18-5	CYLINDER HEAD REMOVAL	9-15
ABS INDICATOR CIRCUIT TROUBLESHOOTING	18-12	CYLINDER HEAD/VALVES SPECIFICATIONS	1-9
ABS INDICATOR PROBLEM CODE INDEX	18-10	CYLINDER INSTALLATION	10-10
ABS MODULATOR	18-30	CYLINDER REMOVAL	10-4
ABS SYSTEM DIAGRAM	18-3	CYLINDER/PISTON SPECIFICATIONS	1-9
ABS SYSTEM LOCATION	18-2	DIODE	21-15
ABS TROUBLESHOOTING	18-15	DTC INDEX	6-14
ABS TROUBLESHOOTING INFORMATION	18-7	DTC TROUBLESHOOTING	6-16
AIR CLEANER	4-6	ECM	6-61
AIR CLEANER HOUSING	6-44	ECT SENSOR	6-58
ALTERNATOR CHARGING COIL	19-10	ELECTRIC STARTER SPECIFICATIONS	1-12
ALTERNATOR/STARTER CLUTCH SPECIFICATIONS	1-10	EMISSION CONTROL SYSTEMS	1-50
BALANCER SHAFTS	13-14	ENGINE DOES NOT START OR IS HARD TO START	24-2
BANK ANGLE SENSOR	6-58	ENGINE IDLE SPEED	4-15
BATTERY	19-6	ENGINE INSTALLATION	8-10
BATTERY/CHARGING SYSTEM SPECIFICATIONS	1-12	ENGINE LACKS POWER	24-3
BRAKE FLUID	4-20	ENGINE OIL	4-12
BRAKE FLUID REPLACEMENT/AIR BLEEDING (VT1300CX)	17-7	ENGINE OIL FILTER	4-14
BRAKE FLUID REPLACEMENT/AIR BLEEDING (VT1300CXA)	17-10	ENGINE REMOVAL	8-4
BRAKE LIGHT SWITCH LIGHTS/METERS/SWITCHES	22-22	ENGINE STOP RELAY	6-60
MAINTENANCE	4-23	EVAP PURGE CONTROL SOLENOID VALVE/CANISTER (CALIFORNIA TYPE)	6-66
BRAKE PAD/DISC	17-16	EVAPORATIVE EMISSION CONTROL SYSTEM (CALIFORNIA TYPE)	4-18
BRAKE PADS WEAR	4-22	EXHAUST SYSTEM	3-10
BRAKE SYSTEM	4-22	FAN CONTROL RELAY	7-19
BRAKE/TAIL LIGHT	22-9	FIN	9-7
CABLE & HARNESS ROUTING	1-22	FINAL DRIVE INSPECTION	14-8
CAMSHAFT INSTALLATION	9-26	FINAL DRIVE INSTALLATION	14-27
CAMSHAFT REMOVAL	9-10	FINAL DRIVE OIL	4-19
CHARGING SYSTEM INSPECTION	19-7	FINAL DRIVE REMOVAL	14-7
CLUTCH	11-6	FINAL DRIVE SPECIFICATIONS	1-11
CLUTCH LIFTER ARM	11-24	FINAL GEAR CASE ASSEMBLY	14-26
CLUTCH SWITCH	22-23	FINAL GEAR CASE BEARING REPLACEMENT	14-15
CLUTCH SYSTEM	4-24	FINAL GEAR CASE SEPARATION	14-11
CLUTCH/GEARSHIFT LINKAGE SPECIFICATIONS	1-10	FLOATING FINAL GEAR CASE	2-2
COMPONENT LOCATION ALTERNATOR/STARTER CLUTCH	12-2	FLYWHEEL/STARTER CLUTCH	12-11
CLUTCH/GEARSHIFT LINKAGE	11-2	FRONT BRAKE CALIPER (VT1300CX)	17-25
CRANKSHAFT/BALANCER/TRANSMISSION	13-2	FRONT BRAKE CALIPER (VT1300CXA)	17-30
CYLINDER HEAD/VALVES	9-2	FRONT FENDER	3-7
CYLINDER/PISTON	10-2	FRONT MASTER CYLINDER	17-21
ENGINE REMOVAL/INSTALLATION	8-2	FRONT PULSER RING	18-28
FINAL DRIVE	14-2	FRONT WHEEL	15-12
FRONT WHEEL/SUSPENSION/STEERING	15-2	FRONT WHEEL SPEED SENSOR	18-26
FUEL SYSTEM (PGM-FI)	6-2	FRONT WHEEL/SUSPENSION/STEERING SPECIFICATIONS	1-11
HYDRAULIC BRAKE	17-2	FUEL CUT RELAY	6-42
REAR WHEEL/SUSPENSION	16-2	FUEL LINE	4-5
CONNECTOR LOCATION	6-8	FUEL LINE REPLACEMENT	6-30
COOLANT REPLACEMENT	7-6	FUEL PUMP	6-35
COOLANT TEMPERATURE INDICATOR/ECT SENSOR	22-16	FUEL RESERVE SENSOR	22-17
COOLING SYSTEM	4-16	FUEL SYSTEM (PGM-FI) SPECIFICATIONS	1-8
COOLING SYSTEM SPECIFICATIONS	1-8	FUEL TANK	6-43
CRANKCASE ASSEMBLY	13-28	GEARSHIFT LINKAGE	11-15
CRANKCASE BEARING REPLACEMENT	13-25	GENERAL SPECIFICATIONS	1-6
CRANKCASE BREATHER	4-7	HANDLEBAR	15-6
CRANKCASE SEPARATION	13-7	HANDLEBAR SWITCH	22-21
CRANKSHAFT/BALANCER/TRANSMISSION SPECIFICATIONS	1-10	HEADLIGHT	22-5
CRANKSHAFT/CONNECTING ROD	13-8	HEADLIGHT AIM	4-24
CYLINDER COMPRESSION	9-6	HORN	22-26
CYLINDER HEAD ASSEMBLY	9-23	HYDRAULIC BRAKE SPECIFICATIONS	1-12
CYLINDER HEAD COVER INSTALLATION	9-31	IACV	6-52
CYLINDER HEAD COVER REMOVAL	9-7	IGNITION COIL	20-8
CYLINDER HEAD DISASSEMBLY	9-16	IGNITION SWITCH	22-20
CYLINDER HEAD INSTALLATION	9-24	IGNITION SWITCH CASE	3-10
		IGNITION SYSTEM INSPECTION	20-5
		IGNITION SYSTEM SPECIFICATIONS	1-12
		IGNITION TIMING	20-10

INDEX

INJECTOR.....	6-50	CYLINDER/PISTON.....	10-3
INTAKE MANIFOLD.....	6-54	ELECTRIC STARTER.....	21-3
LEFT CRANKCASE COVER INSTALLATION.....	12-16	ENGINE REMOVAL/INSTALLATION.....	8-3
LEFT CRANKCASE COVER REMOVAL.....	12-5	FINAL DRIVE.....	14-3
LEFT CRANKCASE REAR COVER.....	3-7	FRAME/BODY PANELS/EXHAUST SYSTEM.....	3-2
LEFT FRONT FORK.....	15-19	FRONT WHEEL/SUSPENSION/STEERING.....	15-3
LICENSE LIGHT.....	22-10	FUEL SYSTEM (PGM-FI).....	6-3
LIGHTS/METERS/SWITCHES SPECIFICATIONS.....	1-13	HYDRAULIC BRAKE.....	17-4
LUBRICATION & SEAL POINTS.....	1-20	IGNITION SYSTEM.....	20-3
LUBRICATION SYSTEM DIAGRAM.....	5-2	LIGHTS/METERS/SWITCHES.....	22-3
LUBRICATION SYSTEM SPECIFICATIONS.....	1-8	LUBRICATION SYSTEM.....	5-3
MAIN STEP.....	3-4	MAINTENANCE.....	4-2
MAINTENANCE SCHEDULE.....	4-4	REAR WHEEL/SUSPENSION.....	16-3
MIL CIRCUIT INSPECTION.....	6-29	SERVICE RULES.....	1-2
MODEL IDENTIFICATION.....	1-3	SHOCK ABSORBER.....	16-15
NEUTRAL SWITCH.....	22-24	SIDE COVER.....	3-6
NUTS, BOLTS, FASTENERS.....	4-27	SIDESTAND.....	4-25
OIL JET.....	5-12	SIDESTAND SWITCH.....	22-25
OIL PRESSURE CHECK.....	5-5	SPARK PLUG.....	4-8
OIL PRESSURE INDICATOR.....	22-19	SPEEDOMETER.....	22-10
OIL PUMP/OIL STRAINER/PRESSURE RELIEF VALVE.....	5-6	STARTER MOTOR.....	21-6
OVER HEAD COVER.....	3-5	STARTER RELAY SWITCH.....	21-14
PCV.....	18-30	STARTER TORQUE LIMITER/IDLE GEAR.....	12-8
PGM-FI SYMPTOM TROUBLESHOOTING.....	6-5	STATOR INSTALLATION.....	12-7
PGM-FI SYSTEM DIAGRAM.....	6-7	STATOR REMOVAL.....	12-6
PGM-FI SYSTEM LOCATION.....	6-6	STEERING HEAD BEARINGS.....	4-28
PGM-FI TROUBLESHOOTING INFORMATION.....	6-11	STEERING STEM.....	15-37
PINION GEAR INSTALLATION.....	14-20	SUSPENSION.....	4-26
PINION GEAR REMOVAL/SHIM REPLACEMENT.....	14-13	SWINGARM.....	16-17
PISTON INSTALLATION.....	10-9	SYSTEM DIAGRAM	
PISTON REMOVAL.....	10-6	BATTERY/CHARGING SYSTEM.....	19-2
POOR HANDLING.....	24-6	ELECTRIC STARTER.....	21-2
POOR PERFORMANCE AT HIGH SPEED.....	24-6	IGNITION SYSTEM.....	20-2
POOR PERFORMANCE AT LOW AND IDLE SPEED.....	24-5	SYSTEM FLOW PATTERN.....	7-2
PRIMARY GEARS.....	11-18	SYSTEM LOCATION	
RADIATOR COOLANT.....	4-15	BATTERY/CHARGING SYSTEM.....	19-2
RADIATOR RESERVE TANK.....	7-18	ELECTRIC STARTER.....	21-2
RADIATOR/COOLING FAN.....	7-10	IGNITION SYSTEM.....	20-2
REAR BRAKE CALIPER (VT1300CX).....	17-41	LIGHTS/METERS/SWITCHES.....	22-2
REAR BRAKE CALIPER (VT1300CXA).....	17-45	SYSTEM TESTING.....	7-5
REAR FENDER.....	3-8	THERMOSTAT.....	7-8
REAR FENDER A.....	3-8	THERMOSTAT HOUSING.....	7-10
REAR MASTER CYLINDER/BRAKE PEDAL.....	17-34	THROTTLE BODY.....	6-45
REAR PULSER RING.....	18-29	THROTTLE OPERATION.....	4-5
REAR WHEEL.....	16-6	TORQUE VALUES.....	1-14
REAR WHEEL SPEED SENSOR.....	18-28	TRANSMISSION/OUTPUT GEAR CASE.....	13-16
REAR WHEEL/SUSPENSION SPECIFICATIONS.....	1-11	TRIM CLIP.....	3-3
REGULATOR/RECTIFIER.....	19-8	TROUBLESHOOTING	
RIGHT CRANKCASE COVER INSTALLATION.....	11-23	ALTERNATOR/STARTER CLUTCH.....	12-4
RIGHT CRANKCASE COVER REMOVAL.....	11-6	BATTERY/CHARGING SYSTEM.....	19-5
RIGHT FRONT FORK.....	15-29	CLUTCH/GEARSHIFT LINKAGE.....	11-5
RING GEAR INSTALLATION.....	14-23	COOLING SYSTEM.....	7-4
RING GEAR REMOVAL/SHIM REPLACEMENT.....	14-12	CRANKSHAFT/BALANCER/TRANSMISSION.....	13-6
ROCKER ARM INSTALLATION.....	9-29	CYLINDER HEAD/VALVES.....	9-5
ROCKER ARM REMOVAL.....	9-9	CYLINDER/PISTON.....	10-3
SEAT.....	3-6	ELECTRIC STARTER.....	21-4
SECONDARY AIR SUPPLY SYSTEM		FINAL DRIVE.....	14-6
FUEL SYSTEM (PGM-FI).....	6-63	FRAME/BODY PANELS/EXHAUST SYSTEM.....	3-2
MAINTENANCE.....	4-17	FRONT WHEEL/SUSPENSION/STEERING.....	15-5
SENSOR UNIT POWER LINE INSPECTION.....	6-15	HYDRAULIC BRAKE.....	17-6
SERVICE INFORMATION		IGNITION SYSTEM.....	20-4
ABS (VT1300CXA).....	18-4	LUBRICATION SYSTEM.....	5-4
ALTERNATOR/STARTER CLUTCH.....	12-3	REAR WHEEL/SUSPENSION.....	16-5
BATTERY/CHARGING SYSTEM.....	19-3	TURN SIGNAL LIGHT.....	22-8
CLUTCH/GEARSHIFT LINKAGE.....	11-4	TURN SIGNAL RELAY.....	22-27
COOLING SYSTEM.....	7-3	VALVE CLEARANCE.....	4-9
CRANKSHAFT/BALANCER/TRANSMISSION.....	13-3	VALVE GUIDE /VALVE SEAT.....	9-19
CYLINDER HEAD/VALVES.....	9-3	VS SENSOR.....	22-14
		WATER PUMP.....	7-16

INDEX

WHEELS/TIRES	4-27	VT1300CX (CALIFORNIA TYPE)	23-3
WIRING DIAGRAMS		VT1300CXA (49 STATES/CANADA TYPE)	23-4
VT1300CX (49 STATES/CANADA TYPE)	23-2	VT1300CXA (CALIFORNIA TYPE)	23-5

MEMO

)

)

)

)

)

)

)
